

## Updating DANTE card configuration

Requires DANTE Firmware update manager software provided by Audinate.

- 1) Connect the DANTE port to the network then switch on the D-Series driver.
- 2) Start the Dante Firmware Update Manager as administrator and allow it to make changes to the computer.
- 3) Select the connection to the network that the Dante unit is on and click “**Next**”.
- 4) Click “**Update DANTE Firmware**”.
- 5) Click “**Browse**” and navigate to the location of the .DNT file provided
- 6) Select the ‘**DanteUltimo with Static IP and append software(Vx\_x).DNT**’ file for the unit and tick the override checkbox then click “**Next**”.
- 7) Click “**YES**” on the warning box.
- 8) Select the unit to be updated by ticking the check box. Click “**Start**” the update.  
**DO NOT TICK ANY OTHER DEVICES**
- 9) Wait for the program to report that it has successfully upgraded the firmware.
- 10) Close the firmware update program.

Checked :	BDB	Approved :	MJP	Date :	13/03/19	19056	Issue 3	EB38524
-----------	-----	------------	-----	--------	----------	-------	---------	---------